


STEP 1: GULLY END DETENTION FLASHING
AND UNDERLAY SHOULD BE FULLY FLASHED TO
SEAL SYSTEM (SEE NOTE TO
SECTION 4 - A MEMBRANE WITH THERMOPLASTIC
POLYURETHANE FINISH TO BE USED)

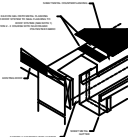

STEP 2: GULLY END DETENTION FLASHING
AND UNDERLAY SHOULD BE FULLY FLASHED TO
SEAL SYSTEM (SEE NOTE)

GUTTER

NOTES:

1. THE PRIMER APPLICATION IS REQUIRED BEFORE THE
SILICONING IS STARTED.
2. NEW METAL CRIP EDGE OR PARANETER FLASHING NEEDS
TO BE TREATED WITH EITHER VANGUARD OR A PRODUCT
THAT WILL REMOVE THE OIL RESIDUE BEFORE
PROCEEDING TO APPLY COATING PRODUCTS OVER THE NEW

SILICONE SYSTEM DETAILS

SCALE:

REV:

REV NUMBER

DATE

BY

09-09-17

CHAPPELL

REVISED

DATE

A-11